YAZOO

BIG WHEEL

22/24/26-INCH

COMMERCIAL

NON-COMPLIANCE MOWER P22B, P22W

S22B, S22W

P24B, P24W

S24B, S24W


P26B, P26W

S26B, S26W

ILLUSTRATED PARTS LIST



LITERATURE NUMBER 1301-083

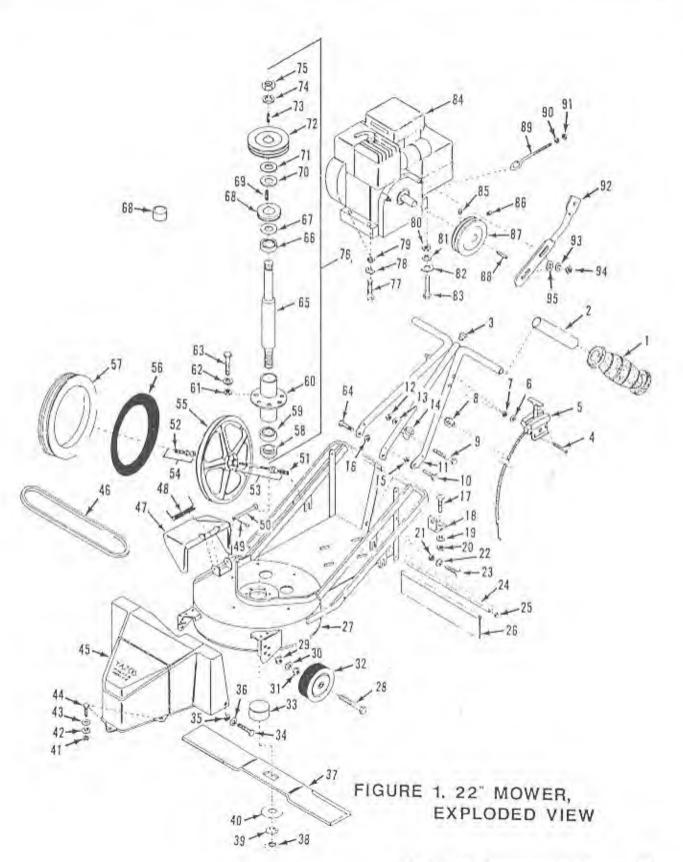


Big Wheel Commercial Owners Manual

KEY	PART NO.	DESCRIPTION	QTY.
1-1	703-016 3903-03	GRIP, HANDLE SPONGE 7/8"	2
1-2	7 03-01 7/ 303-004	GRIP, PLASTIC BLACK 7/8" CAP, TUBE 7/8"	2 2 1 2 1 2 2
1-4	208-007	BOLT, 3/16" X 1 1/4"	2
1-5	301-120	CABLE, THROTTLE	1
1-6 1-7	2301-001 1401-001	WASHER, LOCK 3/16" NUT, 3/16"	2
1-8	309-020	CLIP, CABLE 7/8"	
1-9 1-10	209-050 209-114	BOLT, 1/4" X 20" X 2" BOLT, 5/16" X 1"	1 2 1
1-11	801-527P	ASSEMBLY, HANDLE (P-22)	1
1-11A	801-527S	ASSEMBLY, HANDLE (S-22)	1
1-12 1-13	1401-010 2301-003	NUT, 1/4" WASHER, LOCK 1/4"	1
1-14	705-034	GUIDE, ROPE	1
1-15 1-16	1401-009 1401-009	NUT, LOCK 1/4" NUT, LOCK 1/4"	2
1-17	209-114	BOLT, 5/16" X 1"	1
1-18	214-281	BRACKET, BELT TENSIONING WASHER, LOCK 5/16"	
1-19 1-20	2301-004 1401-020	NUT, 5/16"	4
1-21	1401-020	NUT, 5/16"	1
1-22	2301-004 209-114	WASHER, LOCK 5/16" BOLT, 5/16" X 1"	
1-24	1808-079	ROD, DRAG FLAP	1
1-25 1-26	303-021 609-001	CAP, DRAG FLAP ROD FLAP, DRAG	2
1-27	605-422P	ASSEMBLY, FRAME (P-22B)	1
1-27A	605-422S	ASSEMBLY, FRAME (S-22B)	1
1-27B 1-27C	605-423P 605-423S	ASSEMBLY, FRAME (P-22W) ASSEMBLY, FRAME (S-22W)	1
1-28	103-102	BOLT, 1/2" X 1 1/2"	2
1-29	1401-050 2301-008	NUT, 1/2" WASHER, LOCK 1/2"	2 2 2 2 2
1-31	1401-050	NUT, 1/2"	2
1-32	2302-023	WHEEL, FRONT SHIELD, HUB	2
1-33	1906- 90 6021 209-049	BOLT, 1/4" X 1"	
1-35	1401-009	NUT, LOCK 1/4"	2 2 2 1
1-36 1-37	2301-020 206-622	WASHER, FLAT 1/4" BLADE, CUTTING	1
1-38	1401-071	NUT, 5/8"	1
1-39	2301-010	WASHER, LOCK 5/8'' WASHER, SPRING 5/8''	1
1-40	2301-096 1401-010	NUT, 1/4"	2
1-42	2301-003	WASHER, LOCK 1/4"	2
1-43 1-44	2301-020 209-021	WASHER, FLAT 1/4" BOLT, 1/4" X 3/4" USS	2
1-45	804-073	HOOD	1 2 2 2 2 1 2 2 2 1
1-46	205-512 205-041	V-BELT (P-22B, S-22B) V-BELT (P-22W)	2
1-46A 1-46B	205-041	V-BELT (S-22W)	2
1-47	306-013	CHUTE, GUARD	1
1-48	1916-036 1604-002	SPRING, CHUTE PIN. COTTER 3/32" X 1"	1
1-49	1604-002	PIN, COTTER 3/32" X 1"	1

KEY	PART NO.	DESCRIPTION	QTY.
1-50	1604-043	PIN, CLEVIS	1
1-51	1401-180	NUT, REAR AXLE	22222221
1-52 1-53	1401-180	NUT, REAR AXLE	2
-54	1105-013 1105-013	KIT, REAR WHEEL KIT, BEAR WHEEL	2
-55	2302-100	WHEEL, REAR	2
-56	2005-005	TUBE, INNER	2
-57	2003-006	TIRE, PNEUMATIC	2
-58	101-002	ADAPTER, B/W	3
-59 -60	204-060 806-017	BEARING, HUB 3/4"	1
-61	1401-020	HOUSING, HUB NUT, 5/16"	6
-62	2301-004	WASHER, LOCK 5/16"	6
-63	209-120	BOLT, 5/16" X 1 1/4" NC	6
-64	209-108	BOLT, 5/16" X 3/4" NC	1
-65	1904-034	SHAFT, HUB	1
-66 -67	204-060	BEARING, HUB	1
-68	1913-220 1608-010	SPACER PULLEY, FSP (PART OF HUB ASSY, 808-161 ONLY)	1
A83-	1913-057	SPACER (PART OF HUB ASSY, 808-160 ONLY)	7
-69	1102-011	KEY, 3/16" X 3/16"	1
-70	2301-028	WASHER, 1 3/8" OD	1
-71	2301-028	WASHER, 1 3/8" OD	1
-72 -73	1608-371 1102-001	PULLEY, HUB KEY, 3/16" X 3/16"	1
-74	2301-010	WASHER, LOCK 5/8"	1
-75	1401-070	NUT, 5/8"	1
-76	808-160	ASSEMBLY, HUB (P-22B, P-22W)	1
-76A	808-161	ASSEMBLY, HUB (S-22B, S-22W)	1
-77 -78	209-135	BOLT, 5/16" X 1 3/4"	3 3 3
-79	2301-004	WASHER, LOCK 5/16" NUT, 5/16"	3
-80	1401-020	NUT, 5/16"	1
·B1	2301-004	WASHER, LOCK 5/16"	1
-82	2301-021	WASHER, FLAT 5/16"	1
-83 -84	209-138 E244	BOLT, 5/16" X 2"	1
-84A	E236	ENGINE (P-22B, S-22B) ENGINE (P-22W, S-22W)	1
-85	1901-009	SCREW, 5/16" X 5/16"	1
-86	1901-009	SCREW, 5/16" X 5/16"	1
-87	1608-370 €	PULLEY, ENGINE (P-22B, S-22B, S-22W)	1
-87A	1608-083	PULLEY, ENGINE (P-22W)	1
-88 -89	1102-001 212-014	KEY, 3/16" X 3/16" BOLT, EYE 1/4" X 4"	1
-90	2301-003	WASHER, LOCK 1/4"	1
-91	1401-010	NUT, 1/4"	1
-92	213-045	BRACE, ENGINE SUPPORT (P-22B, S-22B)	1 2 2 2 2
-93	2301-003	WASHER, LOCK 1/4"	2
-94	1401-010	NUT, 1/4"	2
1-95	2301-020	WASHER, FLAT 1/4"	2


KEY	PART NO.	DESCRIPTION	QTY.
2-51 2-52 2-53 2-54	1401-180 1401-180 1105-013 1105-013	NUT, REAR AXLE NUT, REAR AXLE KIT, REAR WHEEL KIT, REAR WHEEL	2 2 2 2 2 2 2 2
2-55	2302-099	WHEEL, REAR	2 2 2
2-56	2005-009	TUBE, INNER	
2-57	2003-010	TIRE, PNEUMATIC	
2-58	101-002	ADAPTER, B/W	1
2-59	204-060	BEARING, HUB 3/4"	
2-60	806-017	HOUSING, HUB	
2-61	1401-020	NUT, 5/16"	6 6
2-62	2301-004	WASHER, LOCK 5/16"	
2-63	209-120	BOLT, 5/16" X 1 1/4" NC	
2.64 2.65 2.66	209-108 1904-034 204-060	BOLT, 5/16" X 3/4" NC SHAFT, HUB	1
2-67 2-68	1913-220 1608-010	BEARING, HUB SPACER PULLEY, FSP (PART OF HUB ASSY, 808-161 ONLY)	7
2.68A	1913-057	SPACER (PART OF HUB ASSY, 808-160 ONLY)	1
2.69	1102-011	KEY, 3/16" X 3/16"	
2.70	2301-028	WASHER, 1 3/8" OD	1
2.71	2301-028	WASHER, 1 3/8" OD	
2.72	1608-371	PULLEY, HUB	
2-73	1102-001 2301-010	KEY, 3/16" X 3/16" WASHER, LOCK 5/8"	1
2-75	1401-070	NUT, 5/8"	1
2-76	808-160	ASSEMBLY, HUB (P-24B, P-24W)	
2-76A	808-161	ASSEMBLY, HUB (S-24B, S-24W)	
2-77	209-135	BOLT, 5/16" X 1 3/4"	3 3 3
2-78	2301-004	WASHER, LOCK 5/16"	
2.79	1401-020	NUT, 5/16"	3
2.80	1401-020	NUT, 5/16"	
2.81	2301-004	WASHER, LOCK 5/16"	
2-82	2301-021	WASHER, FLAT 5/16"	1
2-83	209-138	BOLT, 5/16" X 2"	
2-84 2-84A 2-85	E244 E236 1901-009	ENGINE (P-24B, S-24B) ENGINE (P-24W, S-24W)	1
2-86 2-87	1901-009 1608-370	SCREW, 5/16" X 5/16" SCREW, 5/16" X 5/16" PULLEY, ENGINE (P-248, S-248, S-24W)	1
2-87A 2-88	1608-083 1102-001	KEY, 3/16" X 3/16"	1
2-89	212-014	BOLT, EYE 1/4" X 4"	1
2-90	2301-003	WASHER, LOCK 1/4"	
2-91	1401-010	NUT, 1/4"	
2-92 2-93	213-044 2301-003	BRACE, ENGINE SUPPORT (P-24B, S-24B) WASHER, LOCK 1/4"	1 1 2
2-94	1401-010	NUT, 1/4"	2 2 2
2-95	2301-020	WASHER, FLAT 1/4"	

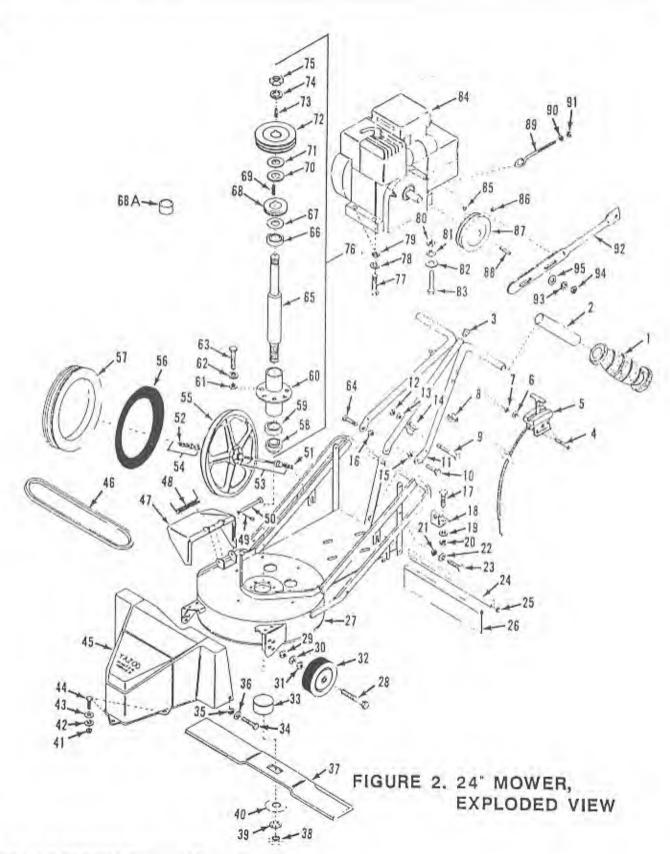

Big Wheel S-22/24/26 Owners Manual

. .

KEY	PART NO.	DESCRIPTION	QTY.
KEY 2-1-2-3-4-5-6-7-8-9-0-1-1-1-2-1-1-1-1-1-1-1-1-1-1-1-1-1-1-1		GRIP, HANDLE SPONGE 7/8" GRIP, PLASTIC BLACK 7/8" CAP, TUBE 7/8" BOLT, 3/16" X 1 1/4" CABLE, THROTTLE (S-24B ONLY) WASHER, LOCK 3/16" NUT, 3/16" CLIP, CABLE 7/8" (S-24B ONLY) BOLT, 1/4" X 20" X 2" BOLT, 5/16" X 1" ASSEMBLY, HANDLE (P-24B, P-24W) ASSEMBLY, HANDLE (S-24B, S-24W) NUT, 1/4" WASHER, LOCK 1/4" GUIDE, ROPE NUT, LOCK 1/4" NUT, LOCK 1/4" BOLT, 5/16" X 1" BRACKET, BELT TENSIONING WASHER, LOCK 5/16" NUT, 5/16" NUT, 5/16" NUT, 5/16" NUT, 5/16" NUT, 5/16" NOBER ASSEMBLY, FRAME (P-24B) ASSEMBLY, FRAME (S-24W) BOLT, 1/2" X 1 1/2" NASHER, LOCK 1/2" NUT, 1/2" WASHER, LOCK 1/4" WASHER, FLAT 1/4" BLADE, CUTTING NUT, 5/8" WASHER, SPRING 5/8" NUT, 1/4" WASHER, SPRING 5/8" NUT, 1/4" WASHER, LOCK 1/4" WASHER, LOCK 1/4" WASHER, SPRING 5/8" NUT, 1/4" WASHER, FLAT 1/4" BOLT, 1/4" X 3/4" USS	QTY. 2212122112111112111111111111111111111
2-42 2-43	2301-003 2301-020	WASHER, LOCK 1/4" WASHER, FLAT 1/4"	2 2 2 1 2 1 1 1

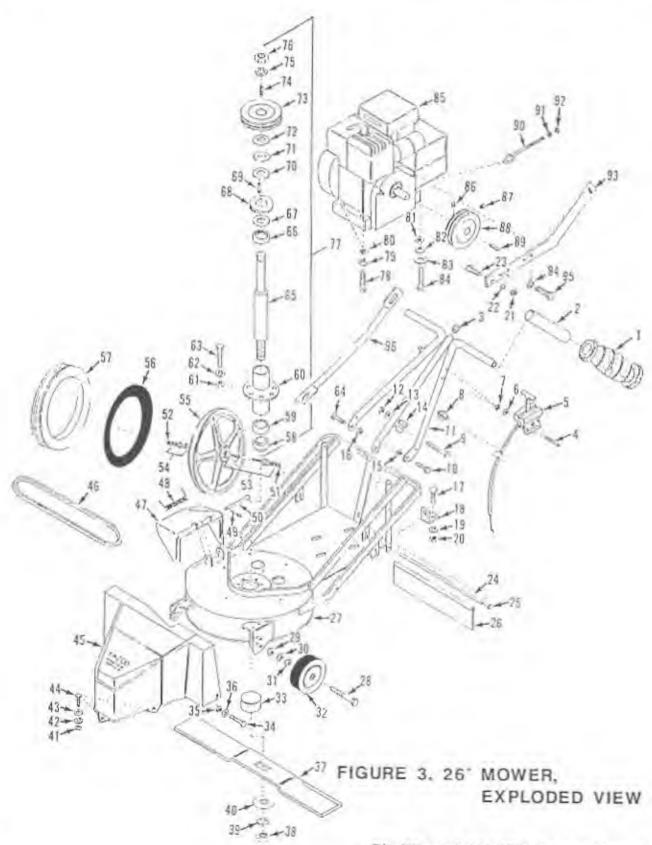

Big Wheel S-22/24/26 Owners Manual

KEY I	PART NO.	DESCRIPTION	QTY.
3-54 3-55 3-56 3-57 3-58 3-61 3-62 3-63 3-63 3-63 3-63 3-71 3-72 3-73 3-74 3-75 3-76 3-77 3-78 3-78 3-81 3-82 3-83 3-84 3-85 3-85 3-85 3-85 3-85 3-85 3-85 3-85	PART NO. 1105-013 2302-099 2005-009 2003-010 101-002 204-060 806-017 1401-020 2301-004 209-120 209-108 1904-034 204-060 1913-220 1608-010 1102-011 2301-028 2301-001 2301-001 2301-001 2301-001 2301-004 2301-009 1401-020 2301-009 1901-009	KIT, REAR WHEEL WHEEL, REAR TUBE, INNER TIRE, PNEUMATIC ADAPTER, B/W BEARING, HUB 3/4" HOUSING, HUB NUT, 5/16" WASHER, LOCK 5/16" BOLT, 5/16" X 1 1/4" NC BOLT, 5/16" X 3/4" NC SHAFT, HUB BEARING, HUB SPACER PULLEY, FSP KEY, 3/16" X 3/16" WASHER, 1 3/8" OD WASHER, 1 3/8" OD WASHER, 1 3/8" OD WASHER, 1 3/8" OD PULLEY, HUB KEY, 3/16" X 3/16" WASHER, LOCK 5/8" NUT, 5/8" ASSEMBLY, HUB BOLT, 5/16" X 1 3/4" WASHER, LOCK 5/16" NUT, 5/16" WASHER, LOCK 5/16" NUT, 5/16" SCREW, 5/16" X 2" ENGINE (S-26B) ENGINE (S-26B) ENGINE (S-26W) SCREW, 5/16" X 5/16" SCREW,	QTY. 22221116666111111111111111111111111111


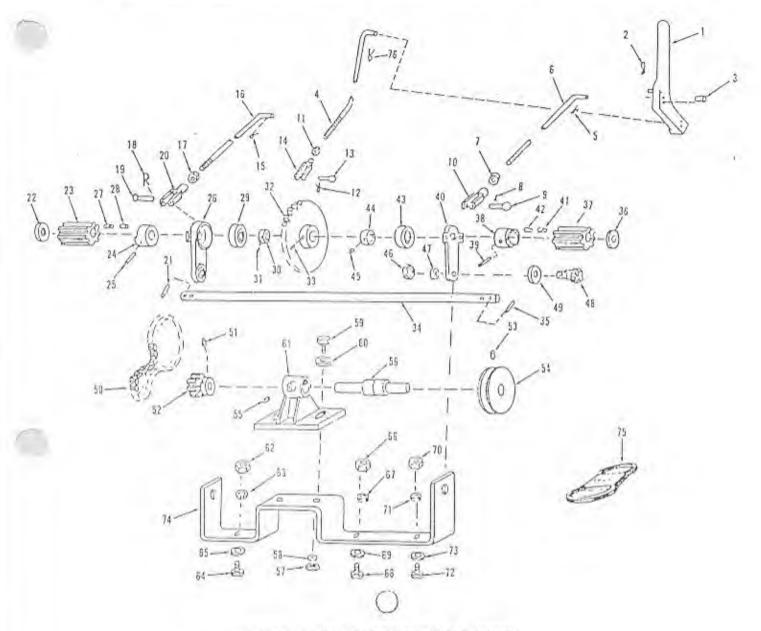


FIGURE 4. SELF-PROPELLING UNIT, EXPLODED VIEW

KEY PART NO	QT	DESCRIPTION	Y PART NO.	KEY
1-1 1201-015 1-2 1604-041 1-3 215-026 1-4 1808-089 1-4A 1808-141 1-5 1604-041 1-6 1808-150 1-7 1401-020 1-8 1604-041 1-9 1604-013 1-10 2501-027 1-11 1604-013 1-12 1604-041 1-13 1604-013 1-12 1604-041 1-13 1604-013 1-14 2501-027 1-15 1604-041 1-16 1808-147 1-17 1401-020 1-18 1604-041 1-19 1604-013 1-20 2501-027 1-21 1604-014 1-22 1913-095 1-23 405-006 1-23A 405-004 1-24 1803-007 1-25 1604-014 1-26 102-003 1-27 1916-013 1-28 1604-007 1-29 204-020 1-30 311-002 1-31 1901-009 1-32 1917-014 1-33 1901-009 1-34 1904-060 1-35 1604-014 1-36 1913-095 1-37 405-006 1-37A 405-004 1-38 1803-008 1-39 1604-014 1-36 1913-095 1-37 405-006 1-37A 405-004 1-38 1803-008 1-39 1604-014 1-36 1913-095 1-37 405-006 1-37A 405-004 1-38 1803-008 1-39 1604-014 1-30 1916-013 1-40 102-003 1-41 1916-013 1-42 1604-007 1-43 204-020 1-44 311-002 1-45 1901-009	5 22 524 526	DESCRIPTION LEVER, FSP ENGAGING PIN, COTTER 3/32" X 5/8" BUSHING, NYLON 5/8" X 1/2" ROD, ENGAGING (S-22) ROD, ENGAGING (S-24, S-26) PIN, COTTER 3/32" X 5/8" ROD, FRICTION TENSION NUT, 5/16" PIN, COTTER 3/32" X 5/8" PIN, RIVET 5/16" X 1 1/4" PIN, RIVET 5/16" X 1 1/4" PIN, RIVET 5/16" X 1 1/4" PIN, GOTTER 3/32" X 5/8" PIN, RIVET 5/16" X 1 1/4" PIN, COTTER 3/32" X 5/8" PIN, RIVET 5/16" X 1 1/4" POKE, ADJUSTABLE 5/16" PIN, GOTTER 3/32" X 5/8" ROD, FRICTION TENSION ROD, FRICTION TENSION NUT, 5/16" PIN, COTTER 3/32" X 5/8" PIN, RIVET 5/16" X 1 1/4" YOKE, ADJUSTABLE 5/16" PIN, COTTER 3/32" X 5/8" PIN, RIVET 5/16" X 1 1/4" YOKE, ADJUSTABLE 5/16" PIN, ROLL 3/16" X 1 1/8" SPACER, 1 1/4" OD X 41/64" ID DRIVER, FRICTION SPLINE (S-22) DRIVER, FRICTION SPLINE (S-24, S-26) FRICTION, RATCHET RH PIN, ROLL 3/16" X 1 1/8" ARM, FRICTION SPRING, FRICTION RATCHET PIN, FRICTION SPLINE DRIVER 1/4" HUB, BEARING COLLAR, SET 5/16" X 5/16" NC SPROCKET, 36-TOOTH SCREW, SET 5/16" X 5/16" NC SPROCKET, 36-TOOTH SCREW, SET 5/16" X 5/16" NC SHAFT, FSP (S-22) SHAFT, FSP (S-22) SHAFT, FSP (S-26) PIN, ROLL 3/16" X 1 1/8" SPACER, 1 1/4" OD X 41/64" ID DRIVER, FRICTION SPLINE (S-24, S-26) FRICTION, RATCHET LH PIN, ROLL 3/16" X 1 1/8" SPACER, 1 1/4" OD X 41/64" ID DRIVER, FRICTION SPLINE (S-24, S-26) FRICTION, RATCHET LH PIN, ROLL 3/16" X 1 1/8" SPACER, 1 1/4" OD X 41/64" ID DRIVER, FRICTION SPLINE (S-24, S-26) FRICTION, RATCHET LH PIN, ROLL 3/16" X 1 1/8" ARM, FRICTION SPLINE DRIVER 1/4" HUB, BEARING COLLAR, SET 5/16" X 5/16" NC NPRING, FRICTION SPLINE DRIVER 1/4" HUB, BEARING COLLAR, SET 5/16" X 5/16" NC NOT, 5/16" SCREW, SET 5/16" X 5/16" NC	1201-015 1604-041 215-026 1808-089 1808-141 1604-041 1808-150 1401-020 1604-041 1604-013 2501-027 1604-013 2501-027 1604-041 1808-147 49 1808-147 49 1808-147 149 1808-150 180	4-1 4-2 4-3 4-4 4-5 4-4 4-1 4-1 4-1 4-1 4-1 4-1 4-1 4-1 4-1

KEY	PART NO.	DESCRIPTION	QTY.
4-50	305-025	CHAIN, FSP	1
4-51	1901-009	SCREW, SET 5/16" X 5/16" NC	1
4-52	1917-012	SPROCKET, FRICTION UNIT 5/8" BORE	1
4-53	1901-009	SCREW, SET 5/16" X 5/16" NC	1
4-54	1618-046	PULLEY, FRICTION	1
4-55	1901-009	SCREW, SET 5/16" X 5/16" NC	1
4-56	204-045	BEARING, FRICTION	1
4-57	1401-020	NUT, 5/16"	2
4-58	2301-004	WASHER, LOCK 5/16"	2 2 2 2
4-59	209-114	BOLT, CAP PLATED 5/16" X 1"	2
4-60	2301-021	WASHER, FLAT 5/16"	2
1-61	806-062	HOUSING, FRICTION HUB	3
1-62	1401-020	NUT, 5/16"	1
1-63	2301-004	WASHER, LOCK 5/16"	1
4-64 4-65	209-114	BOLT, CAP PLATED 5/16" X 1"	4
1-66	2301-021 1401-020	WASHER, FLAT 5/16" NUT, 5/16"	
1-67	2301-004	WASHER, LOCK 5/16"	4
1-68	209-114	BOLT, CAP PLATED 5/16" X 1"	4
1-69	2301-021	WASHER, FLAT 5/16"	1
-70	1401-020	NUT, 5/16"	1
1-71	2301-004	WASHER, LOCK 5/16"	1
-72	209-114	BOLT, CAP PLATED 5/16" X 1"	1
-73	2301-021	WASHER, FLAT 5/16"	3
.74	214-065	BRACKET, FSP (S-22)	4
-74A	214-064	BRACKET, FSP (S-24)	1
-74B	214-063	BRACKET, FSP (S-26)	1
-75	205-425	BELT, FSP (S-22), (S-24)	1
-75A	205-428	BELT, FSP (S-26)	1
1-76	1604-041	PIN, COTTER 3/32" X 5/8"	1

1105-057 Swivel Wheel Kit

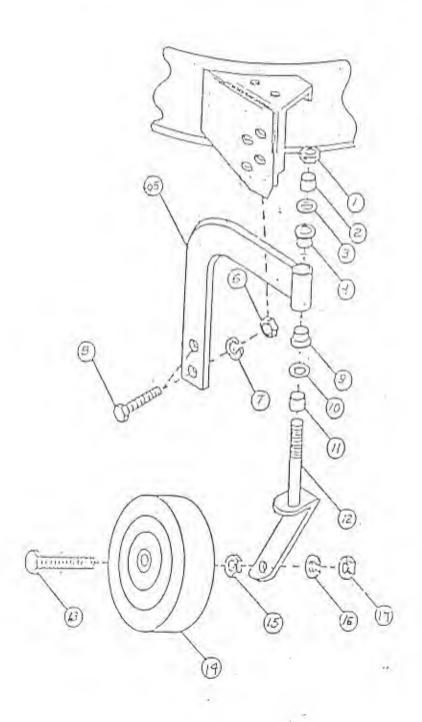

PART DESCRIPTION, SWIVEL WHEEL KIT.

INSTALLATION INSTRUCTIONS,

- TEP (1) REMOVE FRONT WHEELS FROM HOWER.
- STEP (2) USING THE ASSEMBLY DHAWING AS A GUIDE, MOUNT THE SWIVEL WHEEL, ARM TO THE MOWER FRAME. ITEMS NO. (5), (6), (7), (8) ARE HEEDEL
- STEP (3) ASSEMBLE THE WHEEL AND YOKE TOGETHER. ITEMS NO. (12), (13), (14), (15), (16), (17) ARE NEEDED.
- STEP (4) MOUNT YOKE AND WHEEL ASSEMBLY TO SWIVEL WHEEL ARM. THE ASSEMBLY DRAWING PROVIDES A DASIC ASSEMBLY SET UP. THE SPACERS CAN BE RELOCATED WITHIN THIS ASSEMBLY TO ADJUST WHEEL HEIGHT FOR THE CUT DESIRED BY THE OPERATOR. ITEMS NO. (1), (2), (3), (4), (9) (10), (11) ARE NEEDED.
- NOTE: A DYLOK NUT HAS BEEN PROVIDED TO SECURE THE WHEEL AND YOKE ASSEMBLY AT A GOOD PIVOT POINT. THE NUT SHOULD BE TIGHTENED TILL THE ASSEMBLY IS TIGHT BUT WILL STILL PIVOT PROPERLY.

PARTS LIST 1105-057 SWIVEL WHEEL KIT

F. 8	PART HUMBER	PART DESCRIPTION	QUARTIT
01 02 03 04 05 06 07 08 09 10 11 12 14 15 16	1401-228 1913-277 2301-334 0215-157 0214-474 1401-052 2301-008 0209-497 0215-157 2301-334 1913-277 2501-052 2501-053 0103-102 2302-023 1401-051 2301-000 1401-051	NUT, 1/2 IN. NYLOK NG. SPACER, ADJUSTMENT 1/2 WASHER, FLAT 1/2 IN BUSHING, NYLON ARM, SWIVEL WHEEL ASSY NUT, 1/2 IN FULL NG. WASHER, 1/2 LOCK BOLT, 1/2 IN X 1 1/4 IN NG BUSHING, NYLON WASHER, FLAT 1/2 IN SPACER, ADJUSTMENT 1/2 YOKE ASSEMBLY L/MAND YOKE ASSEMBLY L/MAND AXLE, 1/2 IN X 2 1/2 IN NF WHEEL ASSEMBLY FRONT NUT, 1/2 IN JAN NF. WASHER 1/2 IN LOCK NUT, 1/2 IN JAN NF.	217 27 2 4 4 4 2 2 2 1 3 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2

BOX 914-052